

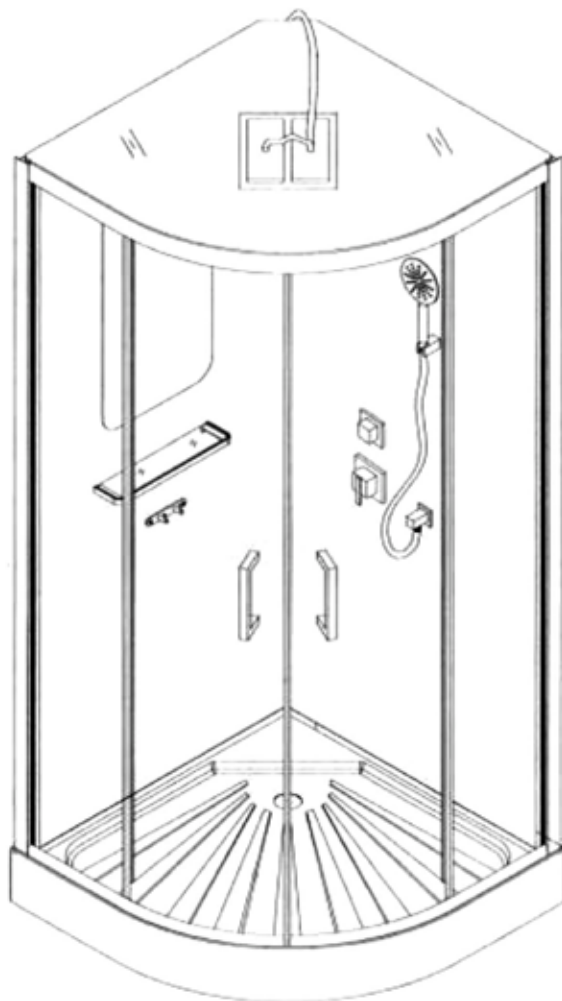
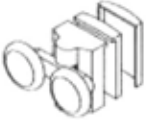
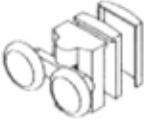






Душевая кабина


VIVA 91







 A1	 X2	 A2	 X2	 A3	 X2	 A4	 X2	 A5	 X1
 A6	 X1	 A7	 X1	 A8	 X4	 A9	 X4	 A10	 X4
 A11	 X1	 A12	 X1	 A13	 X4	 A14	 X2	 A15	 X4
 A16	 X1	 A17	 X1	 A18	 X1	 A19	 X1	 A20	 X1
 A21	 X1	 A22	 X4	 A23	 X3	 A24	 X1	 A25	 X8
 A26	 X1	 A27	 X1	 A28	 X1	 ST4X12=28	 M4X20=8	 ST4X12=4	 M4X20=8

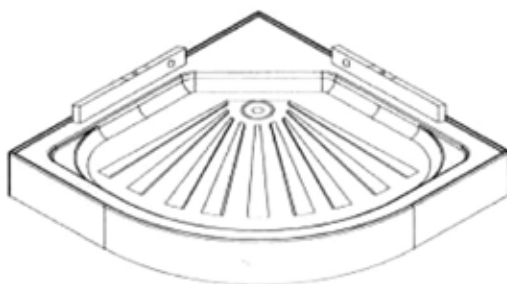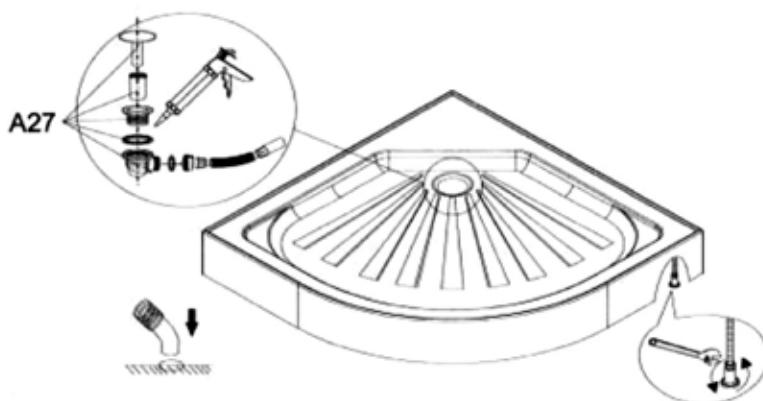

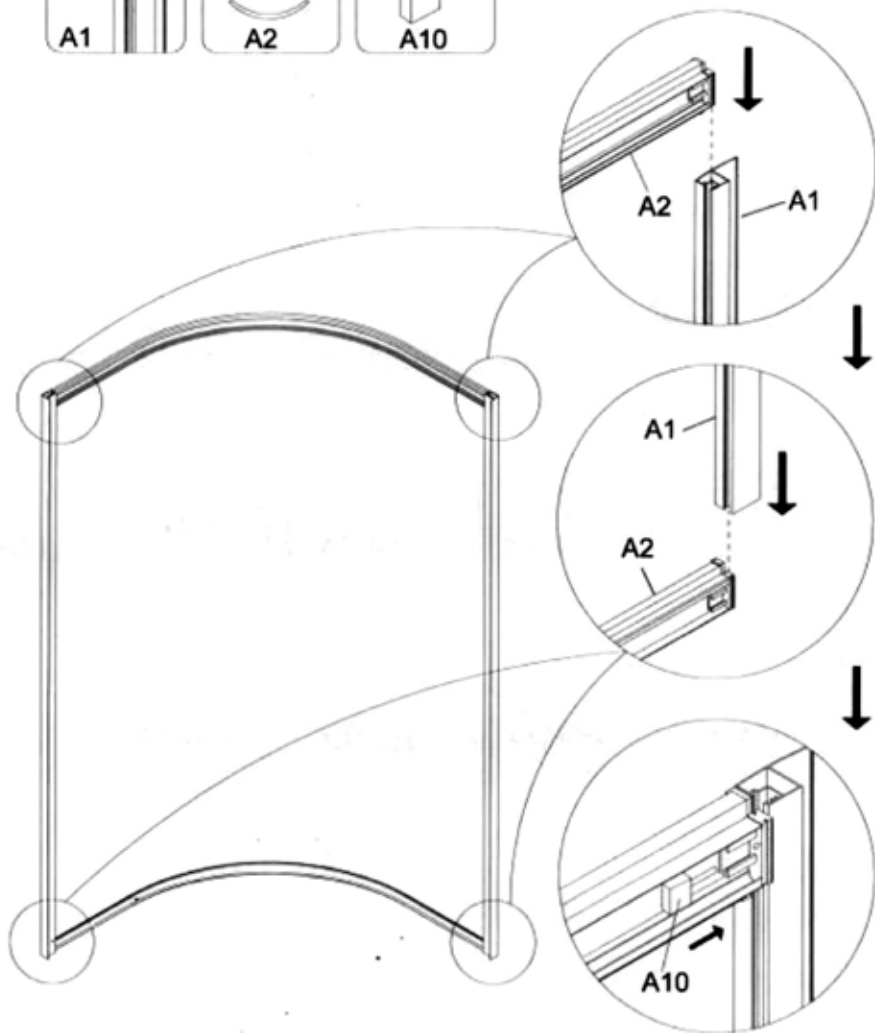

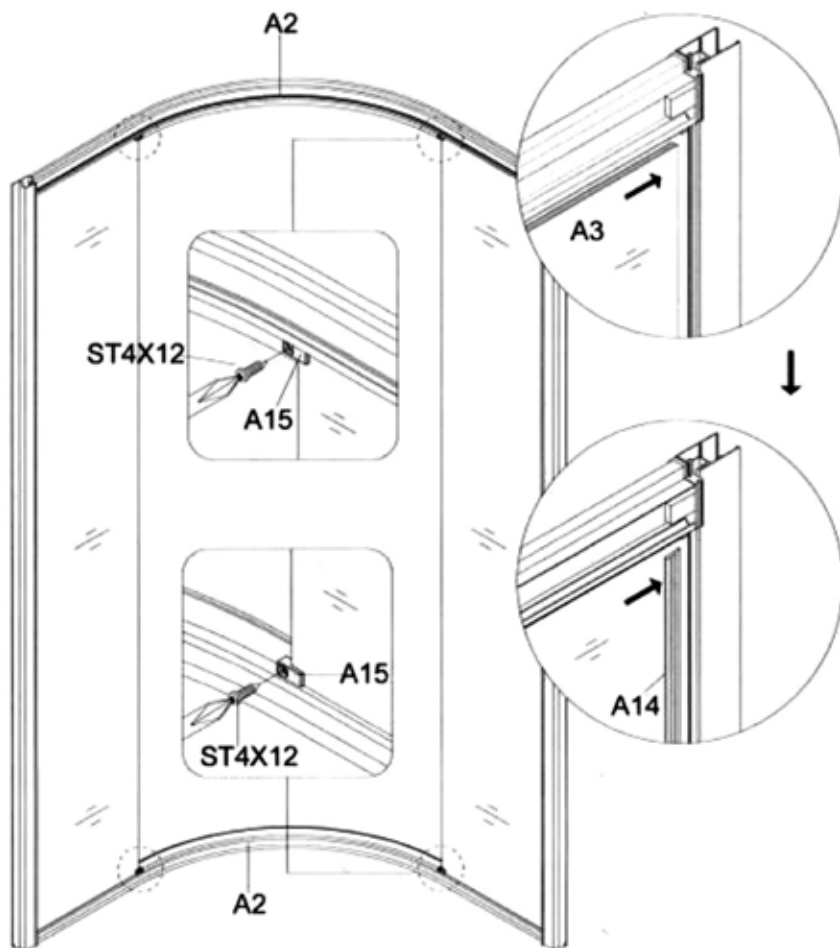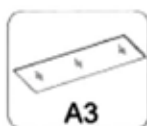




A13



A25




ST4X12=8

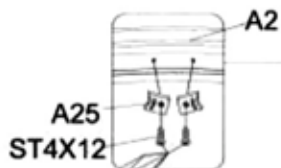

A2

A25


ST4X12

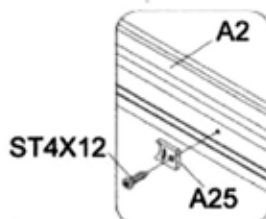


A2

ST4X12

A25

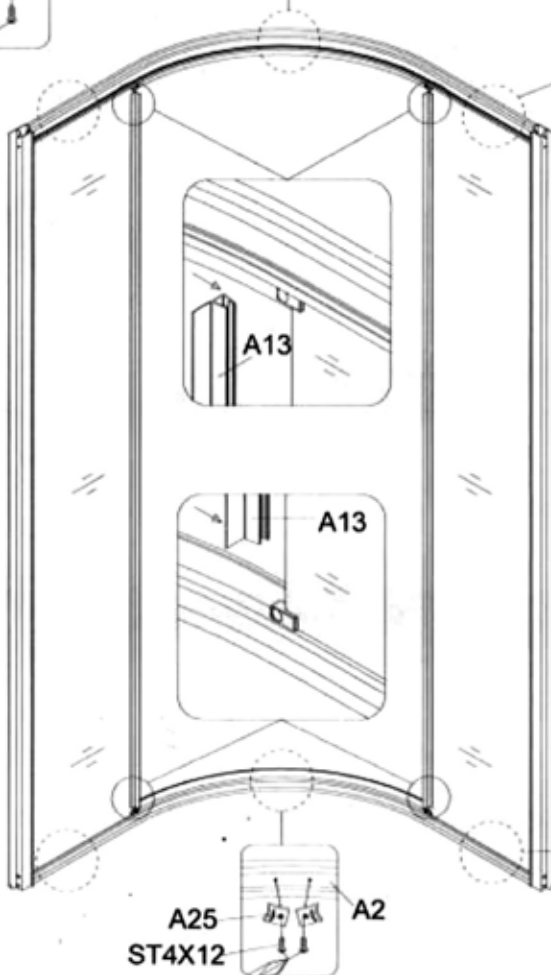

A13

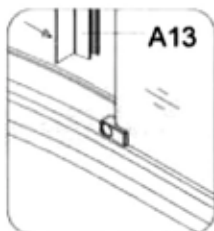

A13



A25

A2








ST4X12



A25

ST4X12

A2

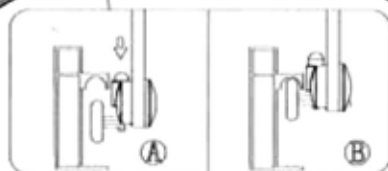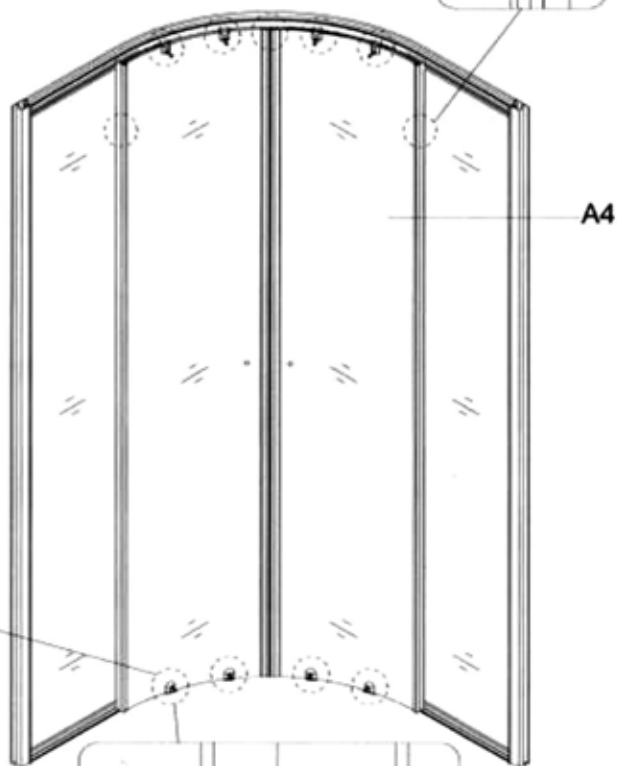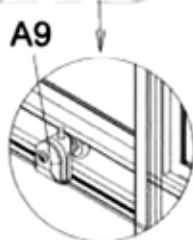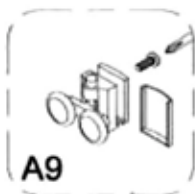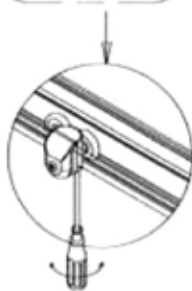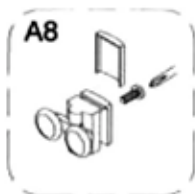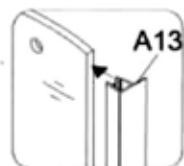



A6




A7








A16



A19


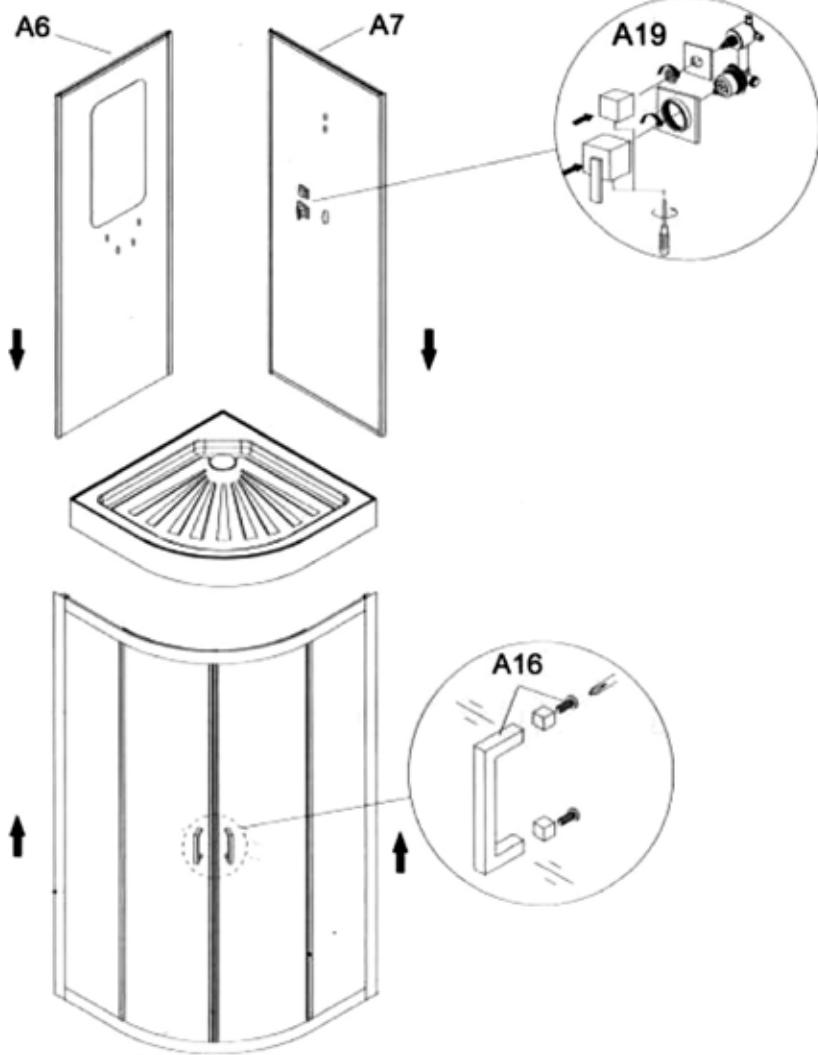


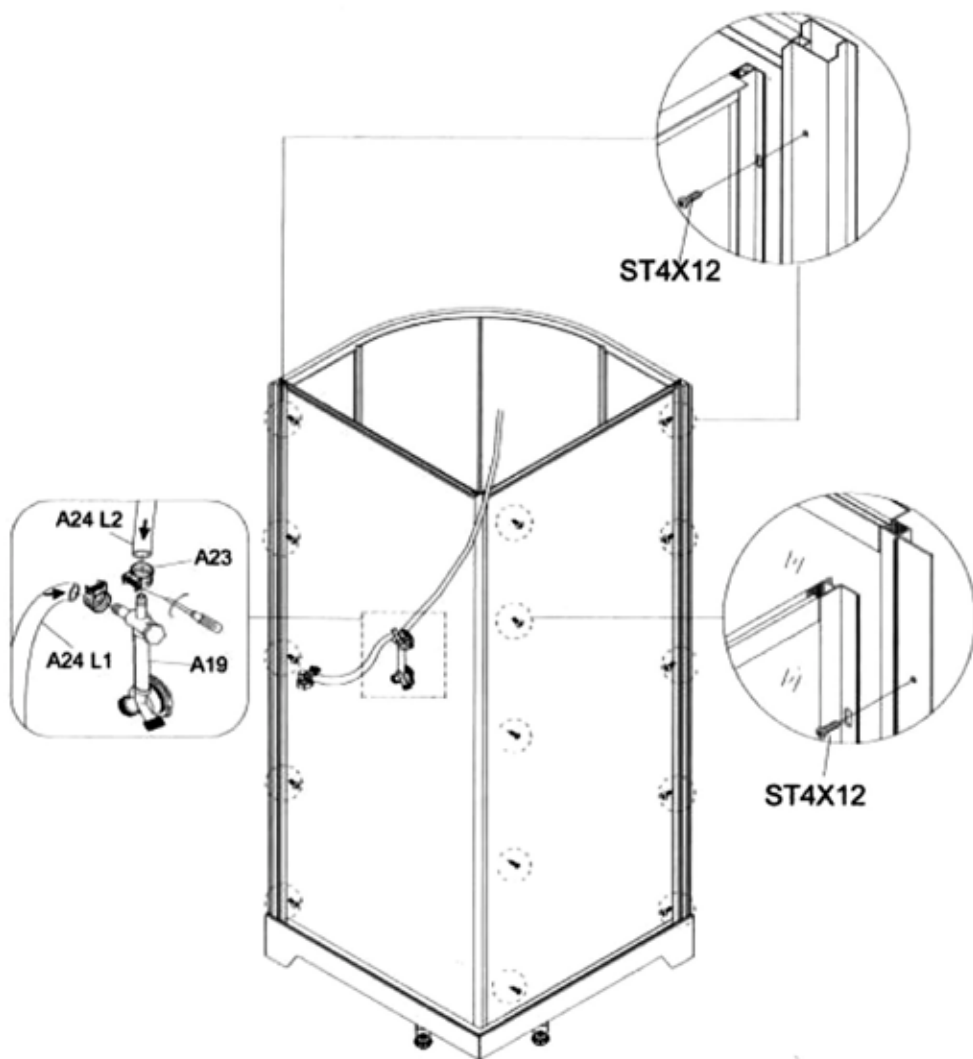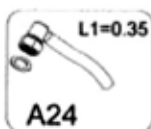

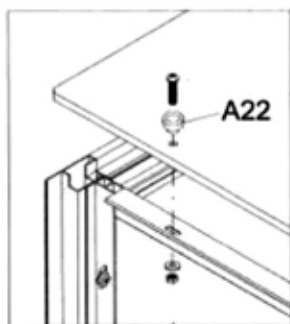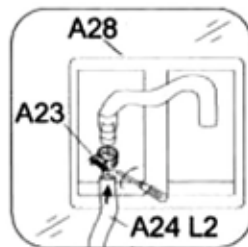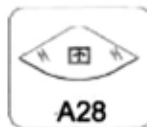

M4X20

ST4X12

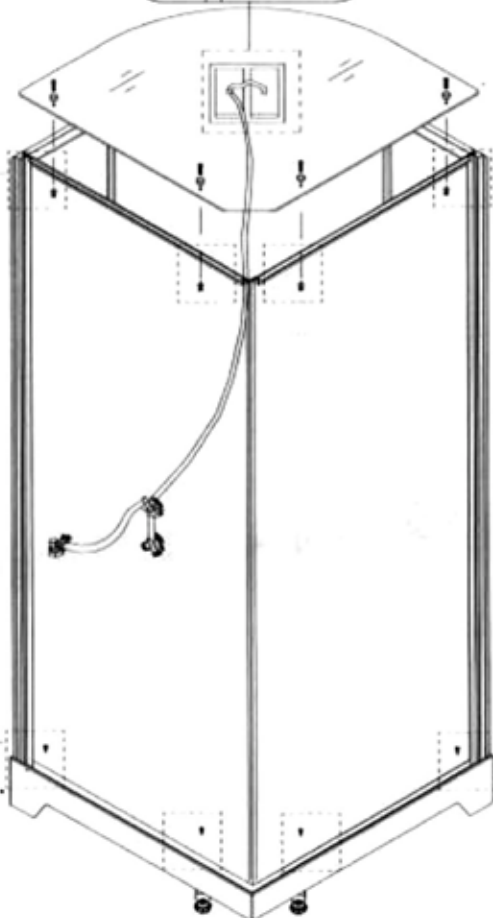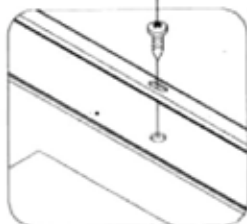



A5



A11



A17



A18



A20



A21



M4X20=4

