


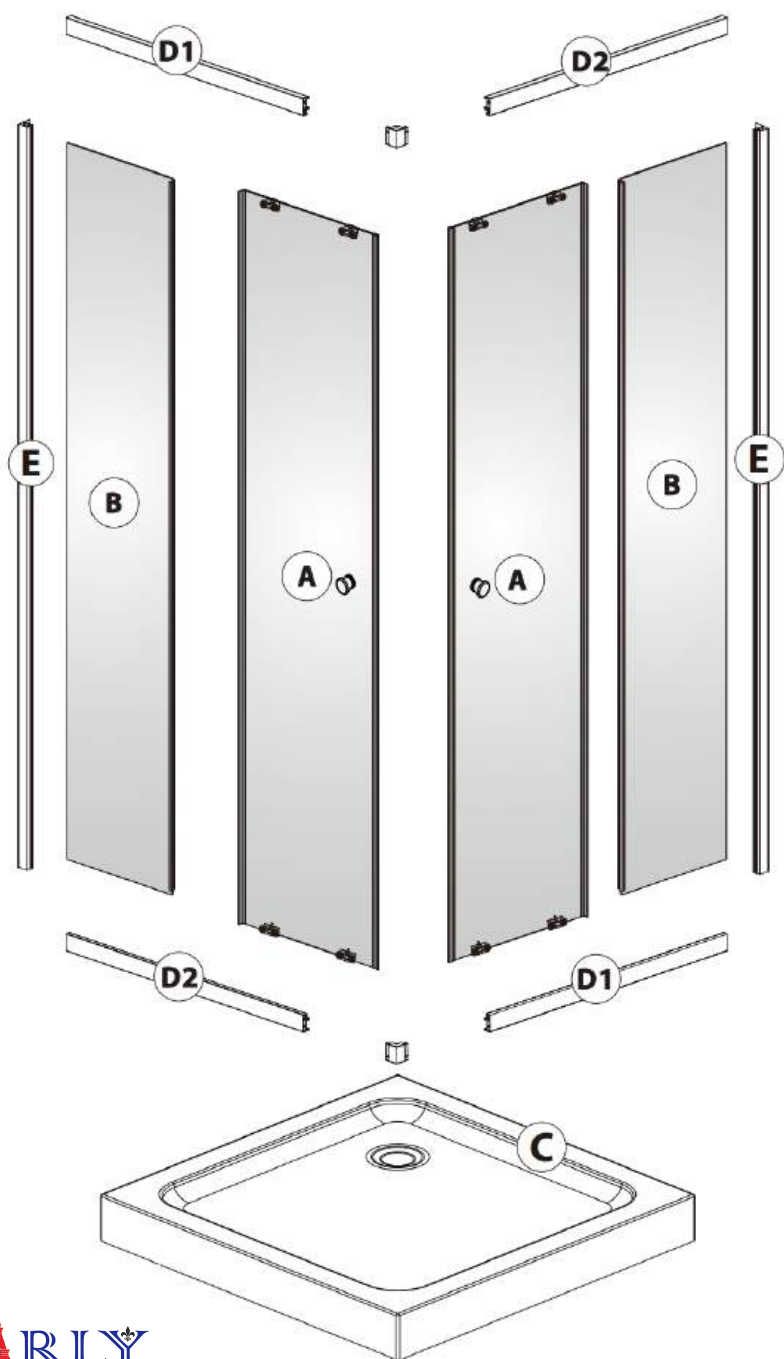

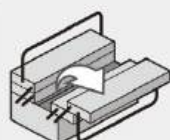
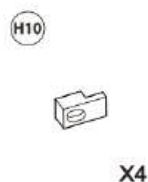



Душевой уголок с поддоном

ZFQ81BN

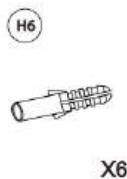





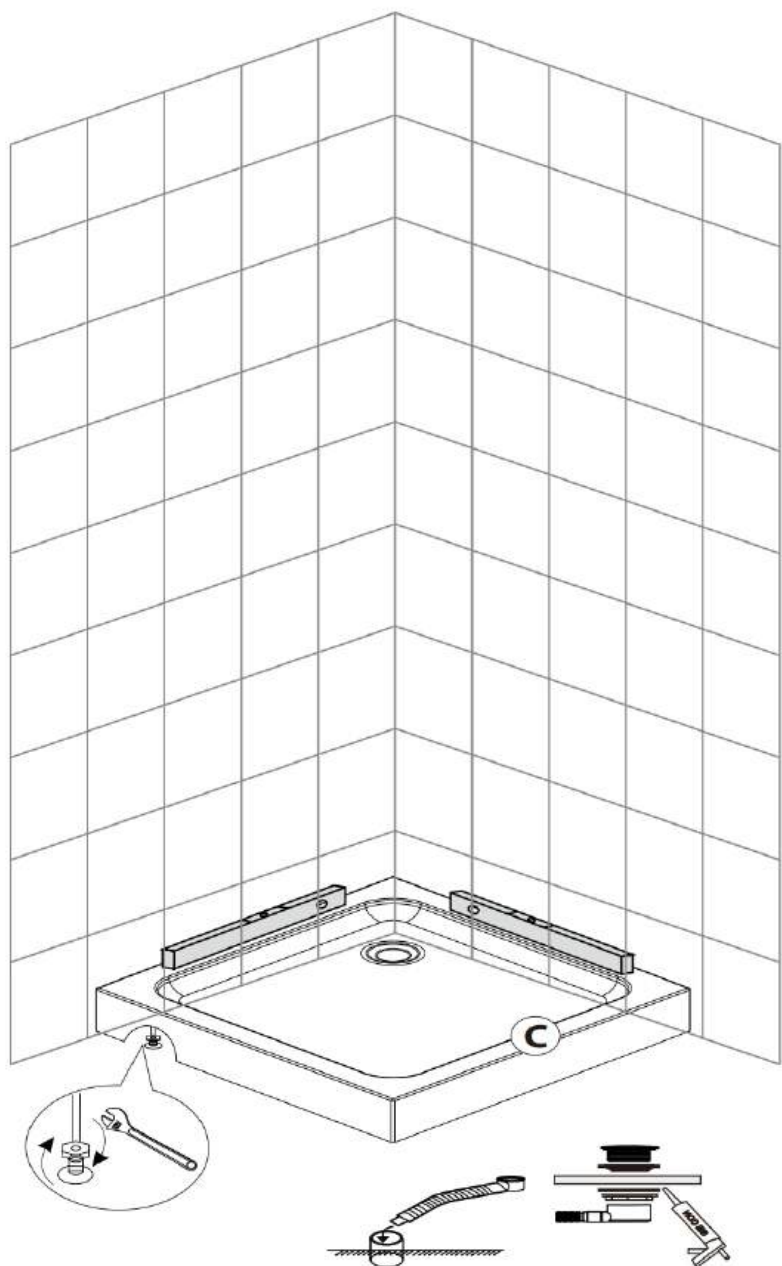

• PH2

H12



X8

H8



ST4X12







X8

H7




ST4X16

X8

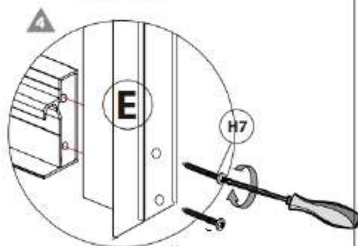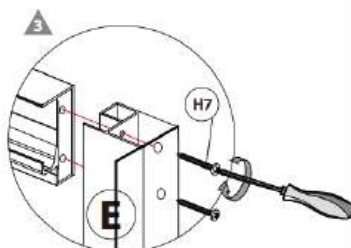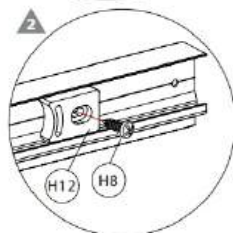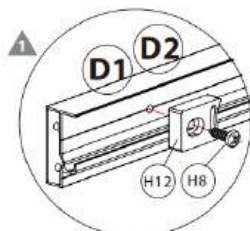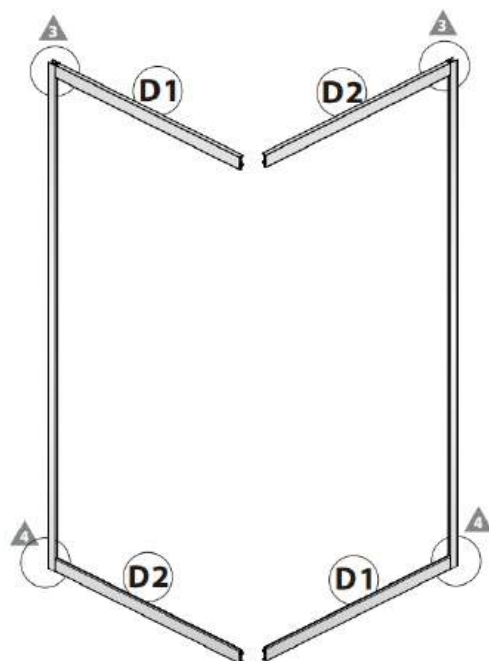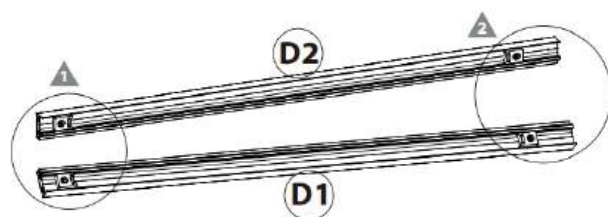

PARLY

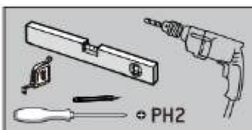

H6



x6

H7



x6

H15







x2





H8



x4

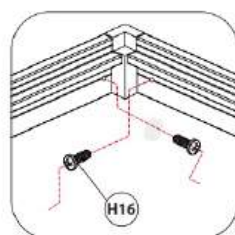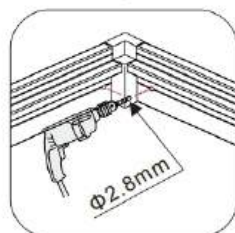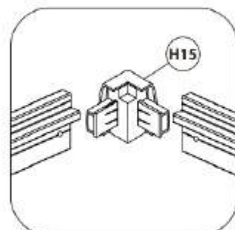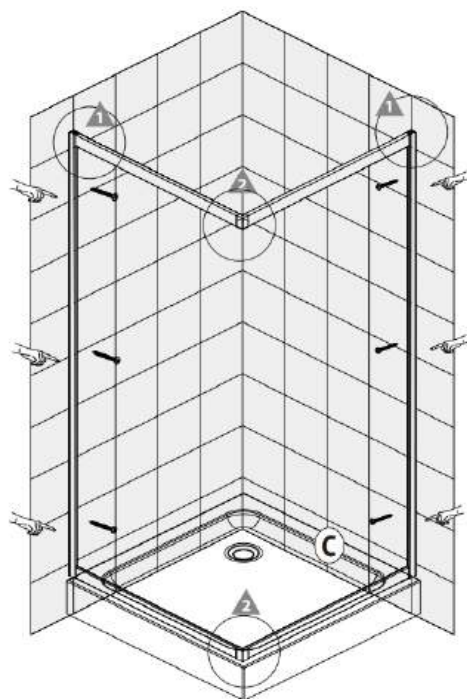

1

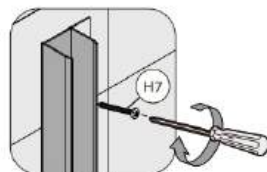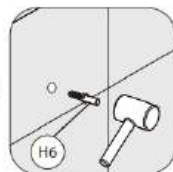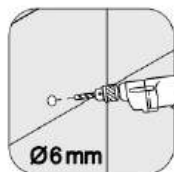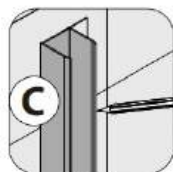



(H10)



X4

(H5)



X4

(H4)




X2









(H3)








X2

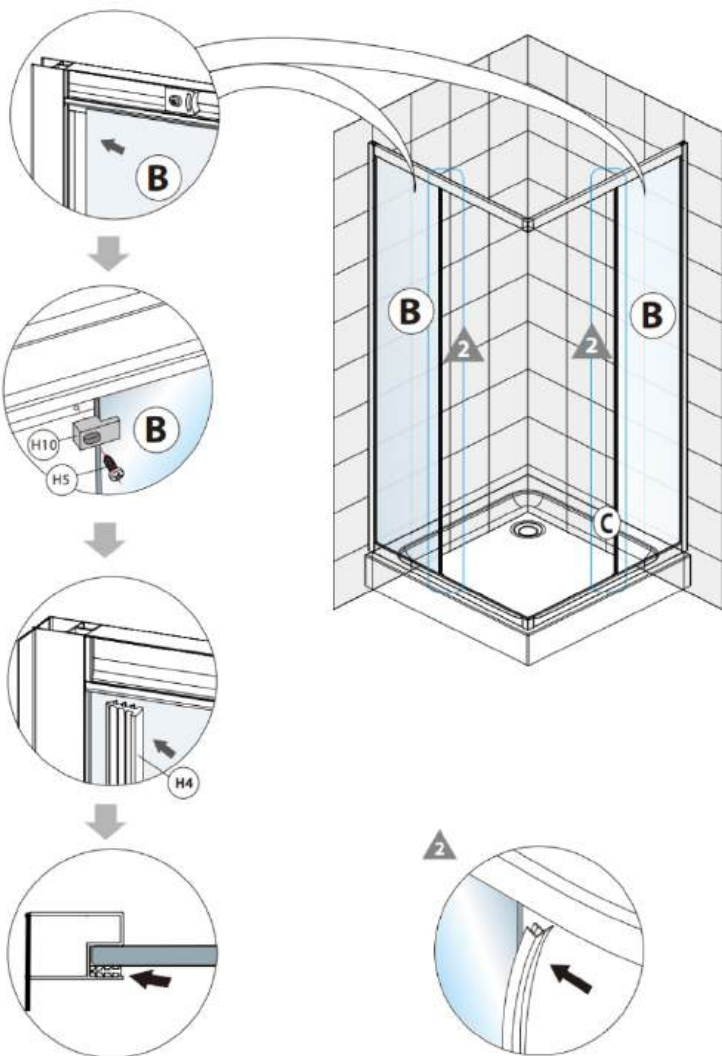

•PH2

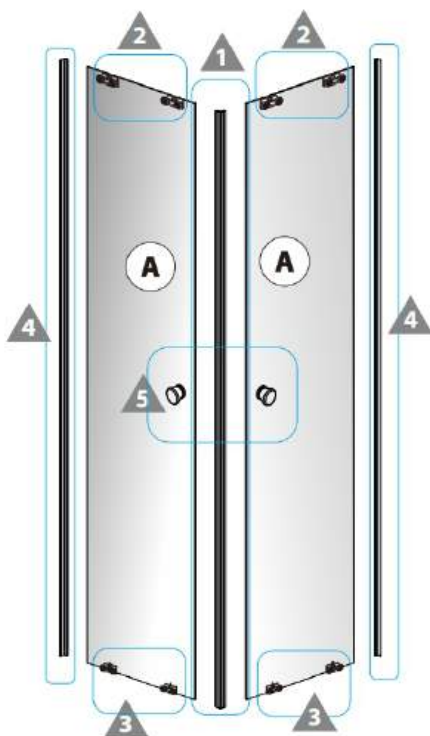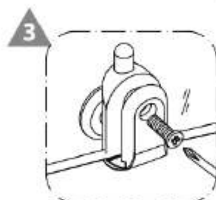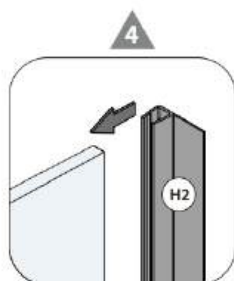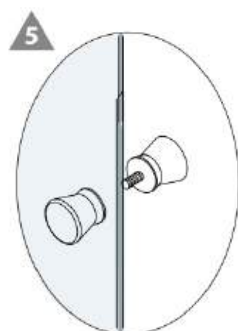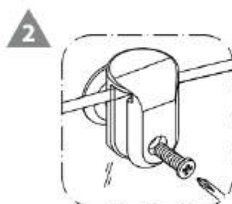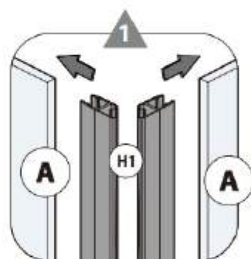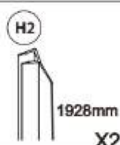

PH2

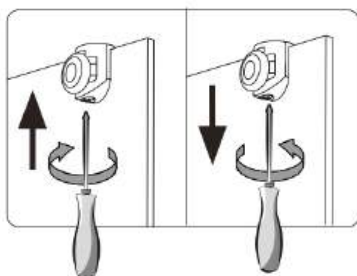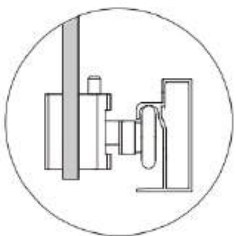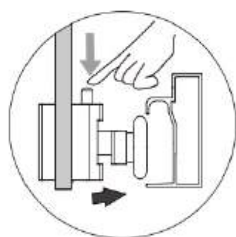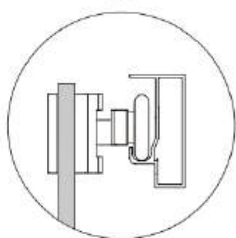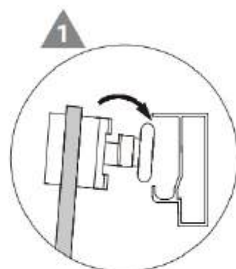

PARLY

